



User Instruction & Installation Manual

FX380 Manual Control 500 watt Xenon Searchlight



Product Reference Number:

A2980 – 115v Deck	A2981 – 240v Deck
A2982 – 115v Deck Pedestal	A2983 – 240v Deck Pedestal
A2984 – 115v Cabin	A2985 – 240v Cabin
A2986 – 115v Cabin Pedestal	A2987 – 240v Cabin Pedestal

Manufacturers details:

Francis Searchlights Ltd
Union Road, Bolton
Lancashire, BL2 2HJ, UK
Tel: +44 (0) 1204 558960
Fax: +44 (0) 1204 558979
<http://www.francis.co.uk>
E-mail: sales@francis.co.uk

Distributor details:

CONTENTS

- 1 - Introduction
- 2 - Safety Precautions
- 3 - Technical Information
- 4 - Unpacking and Installation Instructions
- 5 - Electrical Installation
- 6 - Operating Instructions
- 7 - Fault Finding
- 8 - Maintenance and Servicing
- 9 - Wiring Diagram & General Assembly Drawings
- 10 - Spare Parts List

1 - Introduction

It is imperative that this manual is read carefully and understood before installing your equipment. For your future reference please keep this manual in a safe place.

Thank you for specifying a product from the Francis Searchlights range. All Francis products are designed to give complete customer satisfaction and are manufactured to the highest engineering standards in order to ensure optimum performance and service life.

The Francis Xenon range combine features proven over many years service in the most hazardous conditions in both marine and land installations.

In order to prolong the life and performance of your product, we recommend that you only specify Francis Searchlights spare parts. This will also ensure that any warranties on your equipment will not be invalidated. Information on spares ordering and parts is provided in this manual.

Should you ever need to contact Francis Searchlights Ltd. regarding your equipment, please quote the Product Serial Number at all times.

2 - Safety Precautions

The following instructions must be adhered to, in order to ensure a safe working environment and the safety of the user.

Note: When unpacking or manoeuvring the searchlight into its fixing position, the lifting handles must be used in order to prevent damage to the equipment or personal injury.

- Because of the high internal pressure within the lamp, there is a risk of explosion in either a hot or cold state;
- During operation this lamp emits intense UV radiation which is harmful to the eyes and skin. Suitable protection should be worn;
- The high luminance of the arc can cause severe damage to the eye if viewed directly. ALWAYS wear suitable protective goggles when viewing the lamp;
- Always use protective jackets supplied with the lamp;
- Should it be necessary to examine the lamp with the front bezel removed, always use a protective shield and wear goggles to ensure a safe working environment;
- Searchlights get hot. Never touch the unit when lit and always allow 15 to 20 minutes for cooling down after turning the searchlight off;
- Never place anything on or cover the searchlight when in use;
- Ensure the lamp has cooled sufficiently before removal;
- If undue force appears necessary to remove the lamp, the equipment should be inspected by a competent person or contact the manufacturer;
- When disposing of lamps there are several options available:
 - Return the lamp, via the supplier, to the lamp manufacturer in its complete packaging
 - Because of the cold internal pressure of the lamp is approximately 8 bar, the lamp must first be depressurized before disposal. Place the lamp, in its protective jacket, in a plastic bag and drop from a height of 1 to 2 metres onto a hard surface;
- XBO lamps do not contain materials which are harmful to the environment and thus are not subject to special waste disposal regulations;
- Due to the vast range of lamps available it may appear possible that more powerful lamps can be used in the equipment than for which it was designed. Even when the unit will physically accept a higher wattage lamp, this substitution is not recommended and is dangerous. This action will also void any warranties on the equipment;

Always refer to the lamp manufacturers technical data when dealing with lamps.

3 - Technical Information

This product has been designed to operate in accordance with the product specification. The FX380 500 watt searchlight has the following features:

- All marine grade materials and fixings;
- Electronic power supply unit;
- Parabolic glass reflector;
- Stove enamel painted;
- Full 360° horizontal rotation;
- Vertical movement Deck & Deck Pedestal $\pm 40^\circ$, Cabin & Cabin Pedestal $+40^\circ -20^\circ$;
- Internal self-regulating heater.

The searchlight also performs to the following optical data:

- Xenon light source;
- Lamp Wattage - 500 Watts;
- Supply voltage - 220/240V or 110v/115v;
- Peak Beam Candlepower - 28,000,000 lux;
- Range - 5,290 metres;
- Divergence - 1.5° ;
- Temperature range -50°C .

In order that the searchlight operates correctly it is imperative that competent personnel are responsible for the installation, operation and servicing of this equipment. Failure to adhere to this advice may cause premature failure or incorrect operation of the searchlight, which may damage the equipment or cause personal injury.

Technical information on the Irem Power Supply Unit and Ignitor are included overleaf. For more detailed information please contact the manufacturer.

PSU ref. EX-30 G/1
Ignitor ref. AS-3040

Power supply fixing centres 270 x 235 M4

Technical specifications

Lamp capacity	250W to 500W
Input voltage range	90-265V 1ph + N
Frequency	50/60Hz
Isolation class	CL1
Input current	10A max. at 85Vac
Sinusoidal absorption	PFC 0.98
DC output current	12-30A
DC max. voltage	22.5V
No-load voltage	100V
No-load voltage rising time	≤2 s
Ripple	<1.5%
Efficiency	≥0.8
Output overload protection	electronic
Lamp striking	soft-start ignition current
Ventilation	forced
Remote ON/OFF switching	external switch
Igniter insertion control	through a zero potential contact (5A max.) during 1 s
Lamp current remote setting	not provided
Setting of lamp current limit	provided
Output current stabilisation	provided
Input fuse protection	provided
Input extra voltage protection	provided
Lamp ON signalisation	provided
Display signals	mains ON lamp current setting
Safety standards	EN 61204
EMC standards	EN 50081-1 EN 50082-1, EN 61000-3-2 EN 61000-3-3
Marking	CE
Operating temperature	0° to 40°C
Storage temperature	-20°C to +60°C
Protection degree	IP20
Dimensions	265 x 335 x 135h mm
Weight	7.7 kg

AS series

Introduction


These igniters are expressly designed to strike Xenon, Xenon-Mercury, Mercury, Metal Halide and similar arc lamps. They produce the high voltage, high frequency starting potential required to get the gas in the lamp to ionize and make the current flow possible.

The **AS** igniters meet the lamp manufacturers' recommendations to ensure immediate and correct ignition of the lamp when cold or in any cooling stage.


They should be installed close to the lamp (but thermally shielded from it); the high voltage lead must be as short as possible and carefully insulated to prevent corona loss and reduction of strike energy. The ambient temperature must not exceed 60°C.

Some models are equipped with a built-in special function relay allowing automatically cycled or timed ignition. Also this relay prevents the igniter from striking when the lamp is ON or if the no-load voltage to the lamp is not correct. As far as the insulation class, this device can be considered Cl. II (as per IEC 536), but it must be grounded for interference suppression.

Block diagram

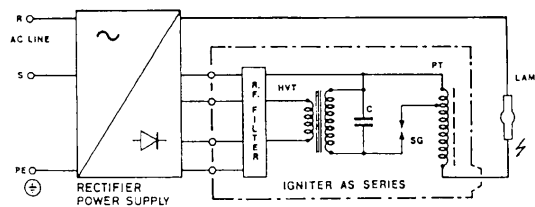

Outline drawing

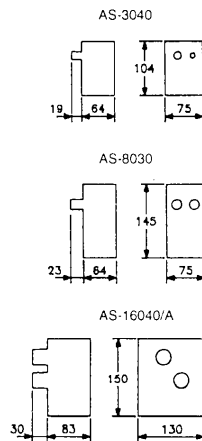

AS Series range

Models	AC input (50-60Hz)		H.V. output KV	Lamp current A	Weight Kg.
	Volt	A during ignition			
AS-3040	230V	0.8	40	30	1.3
AS-8030	±10%	1.5	30	80	1.5
AS-16040A		3.8	40	160	3.5

The suffix 'A', used for the model AS-16040A, means that it has a built-in relay system for automatic or short timed ignition.

4 - Unpacking and Installation Instructions

The following instructions should be read and fully understood prior to installing the equipment to ensure that the correct procedures are followed and all safety precautions are observed.

Note: If the equipment has been in storage for a considerable amount of time, it is advisable to conduct a routine maintenance check on all parts before installation.

Safety Precautions

This equipment should not be connected to an electrical supply before being installed. Installation procedures should be adhered to in order to ensure a safe working environment and reduce the risk of damage or personal injury.

Preparing the Mounting Position

Mark out and drill the fixing holes through the deck. Fit the 'O' ring in position and bolt the searchlight base securely. On an uneven surface it is necessary to use a suitable sealant, such as silicone, in order to ensure a weatherproofed joint. If anti-vibration mounts are to be fitted, the fixing holes for the mounts should also be marked out and drilled. Prior to manoeuvring the searchlight into its' fixing position, the AV mounts should be fitted to the base. When in the desired position, bolt the searchlight firmly down.

5 - Electrical Installation

For safety purposes, only competent personnel should perform the electrical installation. All equipment should be installed to current Electrical Regulations and Standards.

In order to obtain maximum light output from the searchlight, it is essential that the full operating voltage of the lamp fitted be applied to the lampholder contacts.

Method of Electrical Connection

- 1) Disconnect the supply before working on the electrical system;
- 2) The searchlight must be connected to a fused electrical supply, using suitably sized cable;
- 3) If the searchlight is located a considerable distance from the supply, provision must be made in the cable size in order to overcome the voltage drop.

The PSU should NOT be positioned no more than 5 meters away from the Searchlight.

The following table below indicates the maximum length of cable to be used for the AC supply cable, from the control panel to the searchlight:

Searchlight	115v 500w	240v 500w
Cable Size (mm ²)	Distance Max	Distance Max
1.5	34 MTRS	148 MTRS
2.5	55 MTRS	242 MTRS
4	88 MTRS	384 MTRS
6	137 MTRS	598 MTRS
10	230 MTRS	1001 MTRS

- 4) Whenever possible cable terminations should be made below deck and with approved terminal devices;
- 5) If a spare auxiliary fuse or circuit breaker is not available, one of the correct type and rating should be fitted and connected to a positive supply. It is advisable to locate a bus bar or main connection and avoid any direct connection to the supply;
- 6) For ease of use, a single pole switch, of the appropriate rating, should be fitted in a convenient location. All cable lengths should be kept to a minimum.

Installation Guidelines

A typical installation and connection routine for the searchlights is as follows:

Referring to wiring diagram C20609, a 240v or 115v AC supply should be connected to the Power Supply Unit as shown, which then provides a common feed to all other functions and equipment.

Cables required to be connected by the customer: -

4 core 4mm cable from the Searchlight into the PSU. (2 cores to each connection)

4 core 1.5mm cable from the Searchlight to the PSU.

3 core 1.5mm cable from the Searchlight to the heater switch

(customer may need to provide a suitable junction box to extend these three cables – 3 metres supplied). The searchlight head is pre-wired.

When the light is in operation the output from the PSU should be approximately 17v dc at 28amps.

Optional Remote Focus

A typical installation and connection routine for the searchlights is as follows:

Referring to wiring diagram C23786, a 240v or 115v AC supply should be connected to the Control Box as shown, which then provides a common feed to all other functions and equipment.

Cables required to be connected by the customer: -

4 core 4mm cable from the Searchlight to the PSU. (2 cores to each connection)

4 core 1.5mm cable from the Searchlight to the PSU.

4 core 1.5mm cable from the Searchlight to the Control Box.

3 metres supplied of the above 3 cables.

(customer may need to provide a suitable junction box to extend these three cables). The searchlight head is pre-wired.

3 core 1.5mm cable from the Control Box to the PSU. Cable to be supplied by customer

When the light is in operation the output from the PSU should be approximately 17v dc at 28amps.

PSU Basic Operation

- 1) Make sure input and output cables are correctly connected.
- 2) Make sure the ignitor has been correctly connected to X9 terminal board through the contact present on the terminal board itself.
- 3) Make sure lamp on/off switch is set to off.
- 4) Supply the power supply by closing down the input circuit breaker.
- 5) Check the presence of voltage in input (The LED will come on)
- 6) Select the lamp current through the potentiometer. Then check the correct positioning by means of the current LED bar. (28amps is the second from last LED bar, each bar is 2 amps.
- 7) Switch on.

IMPORTANT NOTE:

ENSURE FANS ARE RUNNING AT ALL TIMES DURING OPERATION OF SEARCHLIGHT

Notes for Use of Irem PSU

The Irem PSU used on the 500w searchlight has a potentiometer allowing different output values. Upon installation of the searchlight, and connection to an electrical supply by a qualified Electrical Engineer, voltage and current readings should be taken to ensure that the lamp is operating at its' optimum values.

Upon striking, the running wattage of the lamp can be calculated by using the equation:

$$P = VI$$

Where P= Power (watts)

V= Voltage (V)

I = Current (Amps)

Instruments required: D.C. Ammeter & Multimeter


Procedure

- 1) With the multimeter, test the DC voltage in the searchlight head. This should be approximately 17 volts.
- 2) With the D.C ammeter, test the current of the red DC cable at front of searchlight. It should read approximately 28 amps.
- 3) Multiply these readings together, as shown above, to obtain the desired wattage required, usually about 476watts.


For example, if it is found that upon calculation the lamp is only running at 400watts, then alterations can be made by adjusting the potentiometer. Use the switch to obtain the correct operating characteristics for the lamp in order to ensure optimum life and performance. At each adjustment, the power should be re-calculated by following the above procedure until the ideal setting is achieved.

Always set output slightly below maximum power to ensure optimum lamp life and a safe working environment.

Overrunning the lamp will severely effect the operation of the lamp and its' lifetime. Continuous operation in this mode is extremely hazardous and may cause the lamp to shatter.

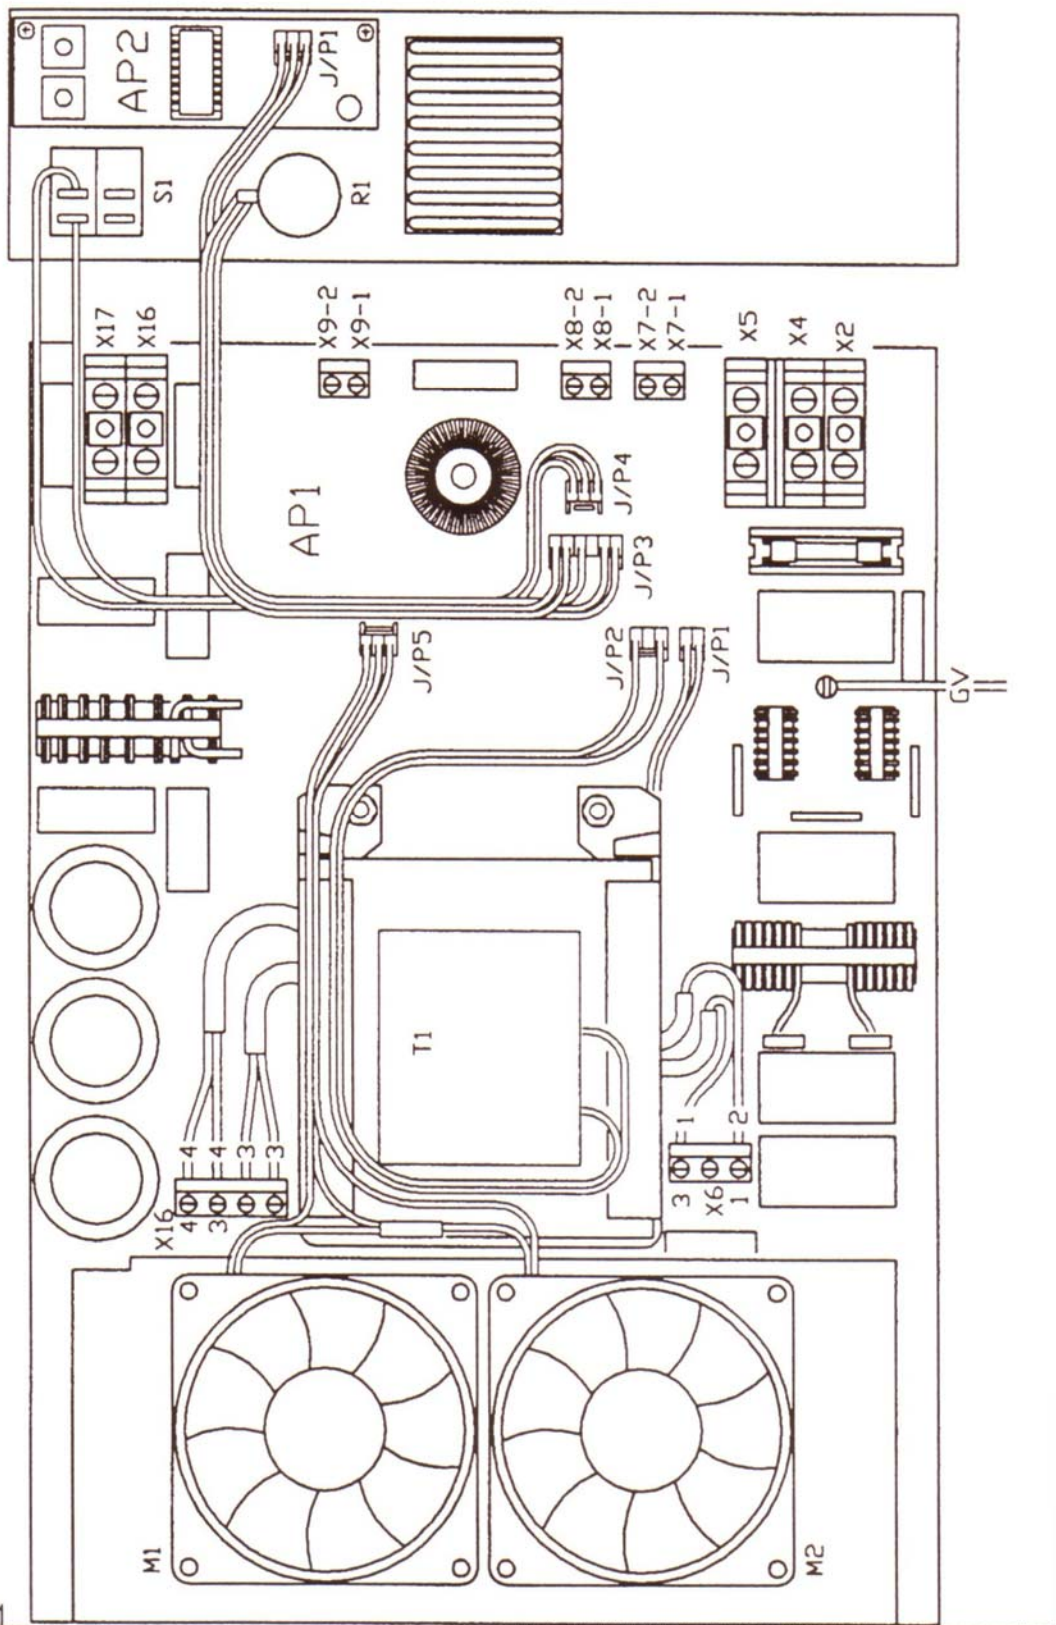

MAN0167/1

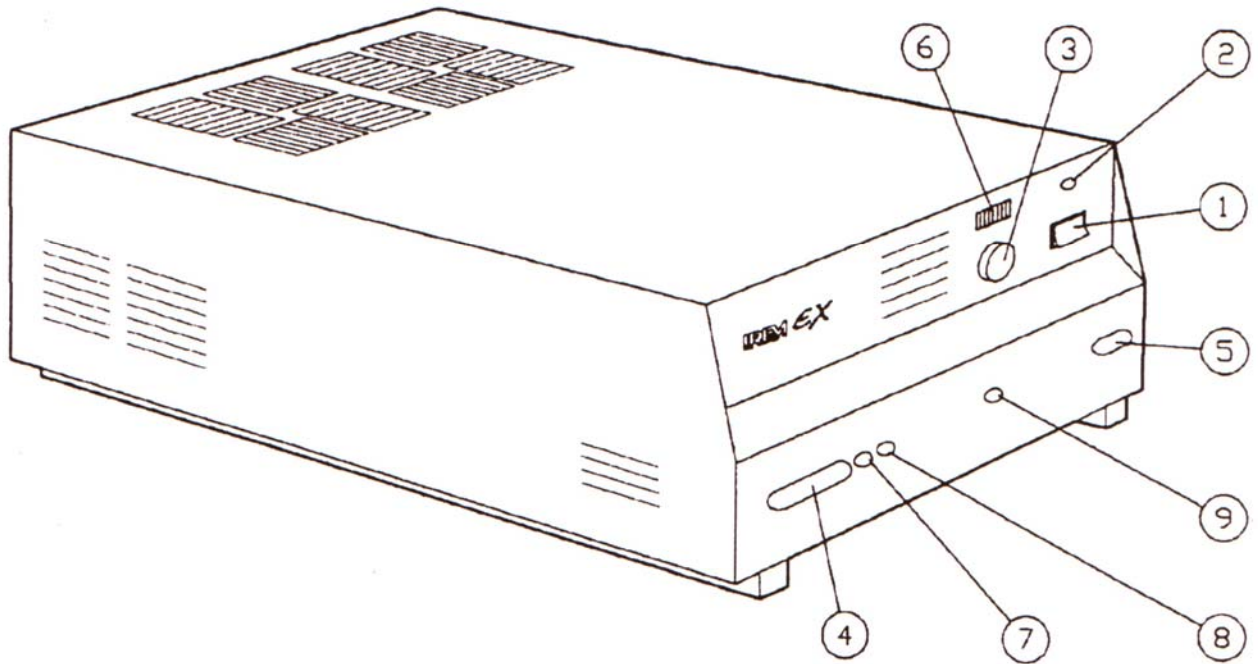


1. **Lamp ON/OFF switch**
2. **Mains on LED**
3. **Lamp current potentiometer**
Adjusting the lamp output current
4. **Input terminal board**
5. **Output terminal board**
Used to connect the lamp power cables (+, -)
6. **Current LED bar**
Indicating the output current level (12A to 30A)
7. **Lamp ON terminal board**
8. **Remote lamp ON/OFF terminal board**
9. **Igniter insertion terminal board**

Fitting instructions for the 500w xenon lamp

Referring to the diagram overleaf:

- 1) Unfasten eight latches (A) on the front and rear of the searchlight;
- 2) Remove the front bezel (B) and rear bezel (C) assemblies and allow to hang from the safety chain;
- 3) Unscrew the two M6 hexagon screws (D) from the front lampholder mounting block (E) and remove the front lampholder assembly from the mounting bracket;
- 4) Loosen the knurled screw on the front (F) and rear (G) lampholder assemblies;
- 5) The lamp can now be inserted, ensure that the lamp extension caps are securely in position prior to insertion. The negative (cathode) end of the lamp should be inserted towards the rear of the searchlight, incorrect insertion of the lamp can irreparably damage the lamp and equipment;
- 6) Tighten the knurled screw (G) on the rear lampholder assembly to hold the lamp in position;
- 7) Fasten the front lampholder mounting block back in position, it will be necessary to pull the front socket against its spring to fit over the lamp. When in place tighten the front knurled screw (F);
- 8) Fasten the front and rear lampholder leads as wiring diagram, ensuring the connections are secure;
- 9) The front bezel and rear bezel can now be replaced;
- 10) Removal is the reverse of the above.

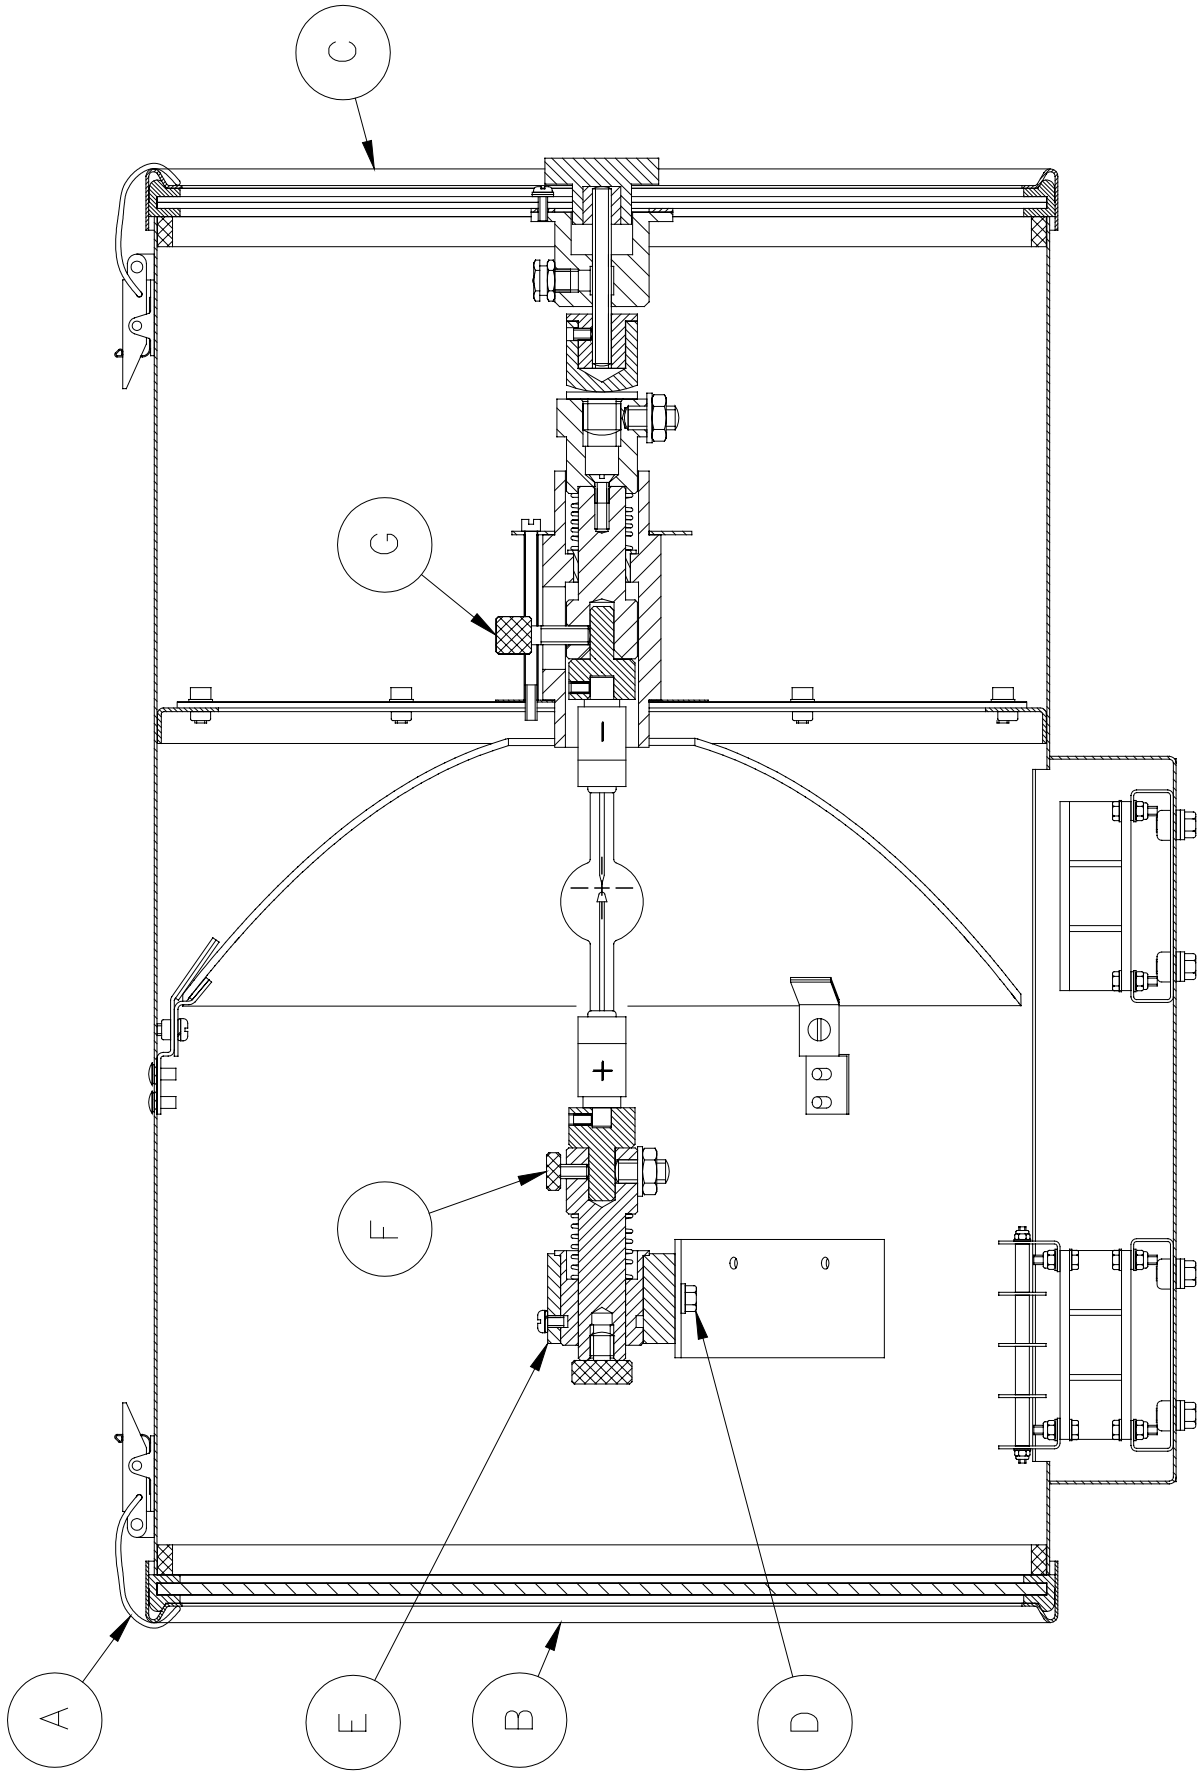

[Back To Top](#)

6 - Operating Instructions

This equipment is designed for use out of doors, in free air. Never place anything on, or cover the searchlight when in use as this may present a hazard.

The PSU should be housed below deck.

The searchlight can be positioned using the elevation and baseplate lockwheels. When in the desired position the lockwheels must be securely fastened to prevent damage.

The beam of the searchlight can be adjusted to give a variety of beam types. By turning the focus lockwheel positioned on the Rear Dome clockwise/anti-clockwise, the lamp holder mechanism moves through spot to flood positions. When the desired beam is achieved simply release the lockwheel.

Remote Focus Option

The beam of the searchlight can be adjusted to give a variety of beam types. Using the yellow remote focus button on the joystick panel, the desired beam can be achieved for any particular application. The beam will move continuously through 'spot' to 'flood'. In order to fix the beam type; simply release the button at the desired position.

Please note that it is advisable to leave the heater permanently on in order to remove condensation from the searchlight head. The heater specified on this equipment is self-regulating and will shut off when it reaches the dew point temperature.

This product should not be used for any purpose other than for which it was designed. Any modifications to the product should not be undertaken without consulting the manufacturer.

Setting to Work

Safe service in use necessitates the strict observance of the following precautions.

- Any article fabricated from quartz or glass is inherently fragile and care should therefore be taken, at all times, when handling lamps;
- Eye protection must be worn when handling lamps that have been removed from their packaging materials. The protective jacket should not be removed from the lamp for safety reasons, as there is a remote possibility of the lamp shattering violently, especially if it is subjected to mechanical shock or vibration;
- Ensure that the power rating of the Xenon lamp to be fitted is suitable for the lamphouse and power supply equipment (rectifier);
- Always isolate the equipment from the supply before inserting a lamp;
- Before inserting the lamp ensure that all contacts are clean. Contacts must be renewed at the slightest sign of corrosion. Sanding or filing down corroded areas is not recommended as this will only make the conducting surface between the pin and lampholder smaller, thus causing the lamp to overheat;
- The inert gas (Xenon) used in XBO lamps are under a pressure of several bar even when the bulb is cold. FOR SAFETY REASONS THE LAMP MAY ONLY BE INSERTED INTO THE LAMPHOUSE WITH THE PROTECTIVE JACKET FITTED;
- Do not twist or bend the fused quartz bulb when fitting the lamp as mechanical stresses MUST be avoided;
- Ensure that the spring contacts firmly surround the pins on the cap of the lamp. Do not apply unnecessary force when tightening the screws;
- After inserting the lamp, ensure that there is sufficient axial play in the lampholder. The lamp must be capable of unimpeded expansion when it warms up to operating temperature. Mechanical forces must not be applied to the fused quartz bulb;
- Electrical leads must be arranged in such a way that there is a sufficient air gap (approximately 40mm) between them and the lamphouse, in order to prevent flashovers from the ignition voltage. All flexible leads must have strain-relieving clamps;
- Before putting the lamp into service for the first time, check the polarity of the electrical connections. INCORRECT POLARITY WILL CAUSE IMMEDIATE DESTRUCTION OF THE LAMP;
- Before the protective jacket is removed, suitable protection must be worn i.e. face mask and gloves with wrist protection;
- Never touch the quartz bulb with bare hands, as fingerprints will make the glass cloudy and cause a severe loss of light. This may also cause recrystallisation and thus weaken the bulb material. Should the bulb be inadvertently touched, remove fingerprints with methylated spirit and a clean, soft paper towel. The bulb should then be wiped with distilled water. NOTE: ALWAYS WEAR MASK AND GLOVES DURING CLEANING);
- All packaging and the protective jacket must be retained for re-use. Whenever removing a lamp, the protective jacket must always be used for safety reasons;

Notes:

- 1) XBO lamps are designed for dc operation only. The dc current may only be varied within the limits of the current control range. An XBO lamp operates best at rated current; over the life of the lamp, the current may be increased to its maximum value to compensate for loss of light. The output of the lamp can be reduced by operating the lamp at minimum current but this does not prolong the life of the lamp;
- 2) For safety reasons, XBO lamps should be replaced once they reach the end of their average lamp life, and not later than 1.25 times their average lamp life. After this time there is an increased risk of the lamp exploding;
- 3) The anode (positive cap marked '+') must be on top when the lamp is inserted in the vertical position. If the anode is incorrectly inserted the arc will be unstable, the bulb will blacken more quickly and the lamp will prematurely fail;
- 4) The HT lead from the high voltage terminal of the ignitor, must be connected to the cathode (negative cap marked '-'). If the lamp is connected with the wrong polarity it will be irreparably damaged after a very short time.
- 5) In all circumstances the lamp manufacturers data should be referred to when dealing with lamps.

7 - Fault Finding

All fault finding must be conducted by a competent person or qualified Electrical Engineer.

Please refer to the following table for the trouble-shooting of Xenon lamps.

Fault	Cause	Remedy
<ul style="list-style-type: none"> ■ Wrong Polarity 	<ul style="list-style-type: none"> ■ Lamp incorrectly fitted ■ Faulty wiring 	<ul style="list-style-type: none"> ■ Anode (large electrode) must always be on top in vertical burning position ■ Check polarity, transpose connections if necessary
<ul style="list-style-type: none"> ■ Cap overheated ■ Cap temperature above 230°C 	<ul style="list-style-type: none"> ■ Faulty contacts ■ Cooling equipment defective 	<ul style="list-style-type: none"> ■ Check terminals, tighten or renew ■ Check cooling equipment and replace if necessary
<ul style="list-style-type: none"> ■ Arc unsteady 	<ul style="list-style-type: none"> ■ Lamp operated outside current control range ■ Magnetic stabilisation for horizontal operation defective 	<ul style="list-style-type: none"> ■ Correct current setting ■ Check magnetic stabilisation
<ul style="list-style-type: none"> ■ Bulb draws in air 	<ul style="list-style-type: none"> ■ Crack in graded seal caused by overheated cap ■ Maximum cap temperature 230°C 	<ul style="list-style-type: none"> ■ Check terminals - tighten or renew
<ul style="list-style-type: none"> ■ Glass erosion on fused quartz bulb 	<ul style="list-style-type: none"> ■ Lamp operated outside current control range ■ Lamp service life exceeded 	<ul style="list-style-type: none"> ■ Correct current setting ■ Check meter
<ul style="list-style-type: none"> ■ Electrodes damaged ■ Premature blackening 	<ul style="list-style-type: none"> ■ Current ripple too high ■ Auxiliary mirror incorrectly adjusted 	<ul style="list-style-type: none"> ■ Have power supply inspected ■ Adjust auxiliary mirror
<ul style="list-style-type: none"> ■ Asymmetrical blackening of lamp (in horizontal burning position) 	<ul style="list-style-type: none"> ■ Lamp operated too long in same position 	<ul style="list-style-type: none"> ■ Turn lamp through 180° after half service life

Failure of Lamp to Ignite

In the event of the xenon lamp failing to light the following steps should be taken:

- 1) Check that the mains supply is connected to the input of the PSU and all switches are on. On operating the strike switch, if the lamp does not light switch off mains supply and check all fuses;
- 2) If the lamp still does not ignite, check the searchlight head. On your command get an operator to activate the starting switch for approximately 5 seconds. During this time listen for any noise (cracking or hissing) coming from within the barrel. If this arcing is heard switch off the supply at the mains. Remove the rear dome to expose the two supply leads to the xenon lamp. Using a dry cloth wipe these leads to remove any dust, moisture or condensation that may have formed around the inside of the barrel. Replace the rear dome, ensuring the swing bolts are securely tightened, and perform the check again, listening for the cracking. If the lamp still fails to ignite, switch off at the mains and replace the xenon lamp in accordance with the safety procedures within this manual and the manufacturers' information.

Any further tests to be carried out with regards to lamp failure must be conducted by a competent electrical engineer and should not be carried out in an explosive atmosphere.

- 3) Before a xenon lamp will ignite, the electrically insulated gas between the electrodes must be ionised. This is done by the ignitor which produces a high frequency voltage (up to 30,000 volts or higher). The Ignitor is activated by switching the lamp on and a crackling or hissing noise should be heard. The ignitor is housed within the rear of the searchlight barrel. This is a totally encapsulated unit and repair is not advised. If found to be faulty a new ignitor must be fitted.

Failure of Optional Remote Focus Facility

The remote focus mechanism is controlled by a small electric motor situated at the rear of the searchlight barrel. If the focus of the light fails the following procedure should be adopted:

- 1) Remove the rear bezel from searchlight barrel and examine focus mechanism. If parts have become loose, tighten fasteners. The mechanism operates on a lever action and this should be checked for correct positioning;
- 2) If the mechanism is okay, check the supply to the motor. This can be done by simply placing a multi-meter across the motor terminals;

If supply is present, this indicates that the motor has failed. Replace the focus motor ensuring that the assembly is correct;

8 - Maintenance and Servicing

In order to prolong the service life and performance of your searchlight, the following maintenance guidelines are recommended:

- Maintenance checks should be conducted before every voyage or at least every three months;
- Before checking, disconnect the equipment from the supply;
- Visually inspect the condition of the equipment;
- Any major or minor structural damage should be rectified immediately in order to reduce sympathetic wear;
- After inspection it may be necessary to clean the inside of the searchlight. The following procedure should be adhered to:
 - Remove the front bezel;
 - Clean the front glass inside and out using a proprietary glass cleaner or metal polish;
 - Clean the reflector if required;
 - Check the reflector mounting gaskets. If signs of corrosion or damage are evident, replace as necessary;
 - Ensure that the lampholder is free from corrosion or other damage;
 - Check earthing point for conductivity;
 - It is advisable to check all seals and gaskets for signs of degradation. Renew if necessary;
 - Upon completing all maintenance requirements the searchlight should be tested for full working order (approximately 20 minutes).
- Every six months the external movement mechanisms i.e. lockwheels, elevation and pan mechanisms, should be lightly lubricated.

If in any doubt as to the correct servicing procedures to adopt please contact your distributor/agent or the manufacturer who will be able to advise the best course of action for your product.

9 - Wiring Diagram & General Assembly Drawings

Drawing Number	Description
C20609	Xenon Wiring Diagram
X4719	FX380 Deck General Assembly
X4720	FX380 Deck Pedestal General Assembly
X4721	FX380 Cabin General Assembly
X4722	FX380 Cabin Pedestal General Assembly
C23786	Xenon Wiring Diagram – Remote Focus Control Box – Remote Focus


FIRST USED ON

FX380D

DO NOT SCALE DRAWING (569)

THIRD ANGLE PROJ

50mm
0 10 20 30 40

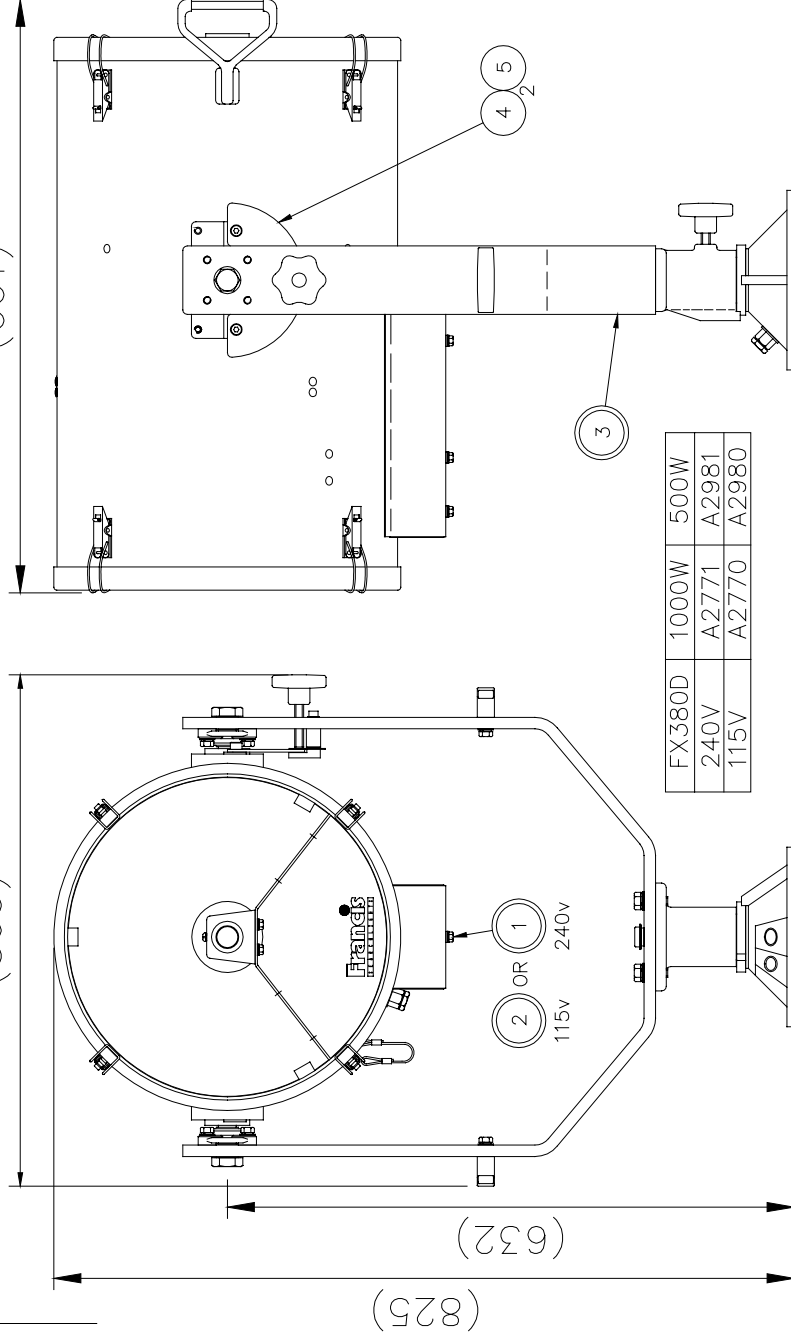

ITEM	PART No.	DRG No.	DESCRIPTION	QTY	ITEM	PART No.	DRG No.	DESCRIPTION	QTY
1	C16927	X4715	BARREL ASSY 240v	1	4	C11380	X2863	QUADRANT	1
2	C16934	X4715	BARREL ASSY 115v	1	5	C11182		M8 x 16 SKT CAP HD SCREW	2
3	C16940	X4729	DECK MOUNT	1					


ISS No	MODIFICATION DETAILS	DATE & INITS
1	AS FIRST DRAWN	6.97 D.S.
2	500W VERSIONS ADDED. (EC0724)	1.99 TJC
3	BROUGHT IN-LINE WITH DETAIL (EC0844)	10.00 D.S.
4	RE-DESIGNED TO USE RC CRUTCH (EC0874)	1.01 D.S.
5	BROUGHT IN-LINE WITH DETAIL (EC0998)	3.02 M.T
6	BARREL LATCHES (EC1020)	2.03 D.S.

STANDARD PRACTICE
Deburr all cut/machined edges
Break corners R0.25(Max) U.O.S.
TOLERANCES U.O.S: -
General: ±
Angular: ±
Hole centres & posns: ±
Sand Casting: To ISO 8062 CT10
Die Casting: To ISO 8062 CTB

Francis
SEARCHLIGHTS

DRAWN		D.S.	DATE	9.6.97	MATERIAL	FINISH		DESCRIPTION		PART No./DRG No.	SHT
CHECKED		SCALE		1:5					FX380D G.A.		X4719 1
ALL DIMENSIONS IN MILLIMETRES											
FRANCIS SEARCHLIGHTS LIMITED, UNION ROAD, BOLTON, BL2 2HJ © 1997 A3 CONT ON SHEET											

11 10 9 8 7 6 5 4 3 2 1

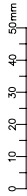

THIRD ANGLE PROJECTION


DO NOT SCALE DRAWING

FIRST USED ON
FX380DP

(1706)
(1513)

(661)

(569)

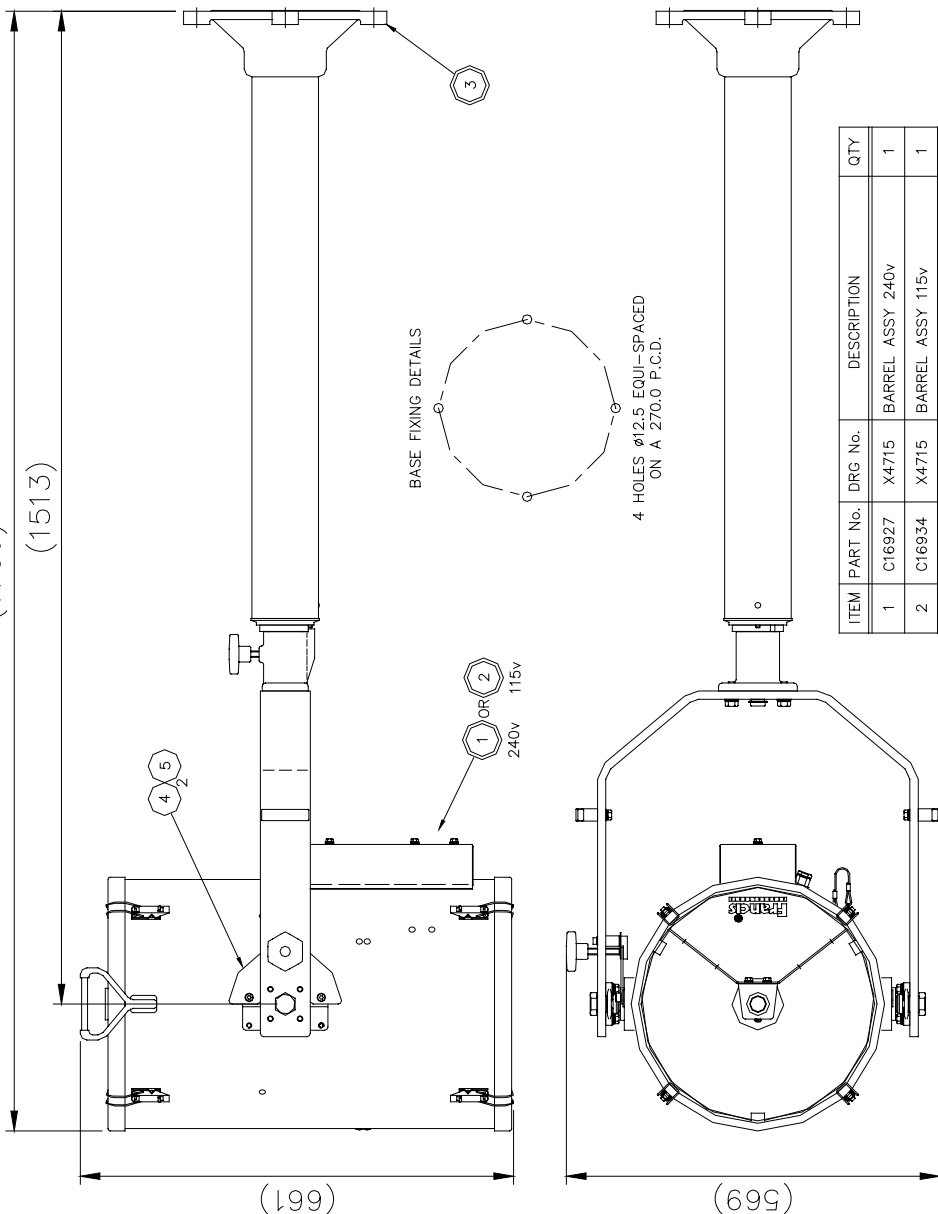

BASE FIXING DETAILS

4 HOLES $\phi 12.5$ EQUI-SPACED
ON A 270.0 P.C.D.

ITEM	PART No.	DRG No.	DESCRIPTION	QTY
1	C16927	X4715	BARREL ASSY 240v	1
2	C16934	X4715	BARREL ASSY 115v	1
3	C16940	X4729	DECK MOUNT	1
4	C1380	X2863	QUADRANT	1
5	C1182		M8 x 16 SKT CAP HD SCREW	2

FX380DP	1000W	500W
240V	A2773	A2983
115V	A2772	A2982

ISS No	MODIFICATION DETAILS	DATE D.S. M.T
1	AS FIRST DRAWN	6.97 D.S. M.T
2	500w VERSIONS ADDED. (EC0724)	10.00 D.S. M.T
3	BROUGHT IN-LINE WITH DETAIL (EC0844)	10.00 D.S. M.T
4	RE-DESIGNED TO USE RC CRUTCH (EC0874)	1.01 D.S.
5	BROUGHT IN-LINE WITH DETAIL (EC0998)	3.02 M.T
6	BARREL LATCHES (EC1020)	2.03 D.S.

STANDARD PRACTICE
Deburr all cut/finished edges
Break corners R0.25(Max) U.O.S.



DRAWN	D.S.	DATE	6.97	TOLERANCES	
CHECKED	SCALE	1:5	Centerd: ± Angular: ±		
ALL DIMENSIONS IN MILLIMETRES					
FRANCIS SEARCHLIGHTS LIMITED · UNION ROAD · BOLTON · BL2 2HJ					
FINISH			DESCRIPTION		
			FX380DP G.A.		
PART No./DRG No.			X4720		
SHT			1		

© 1997 A2 CONT ON SHEET

11

10

9

8

7

6


5

4

3

2

1

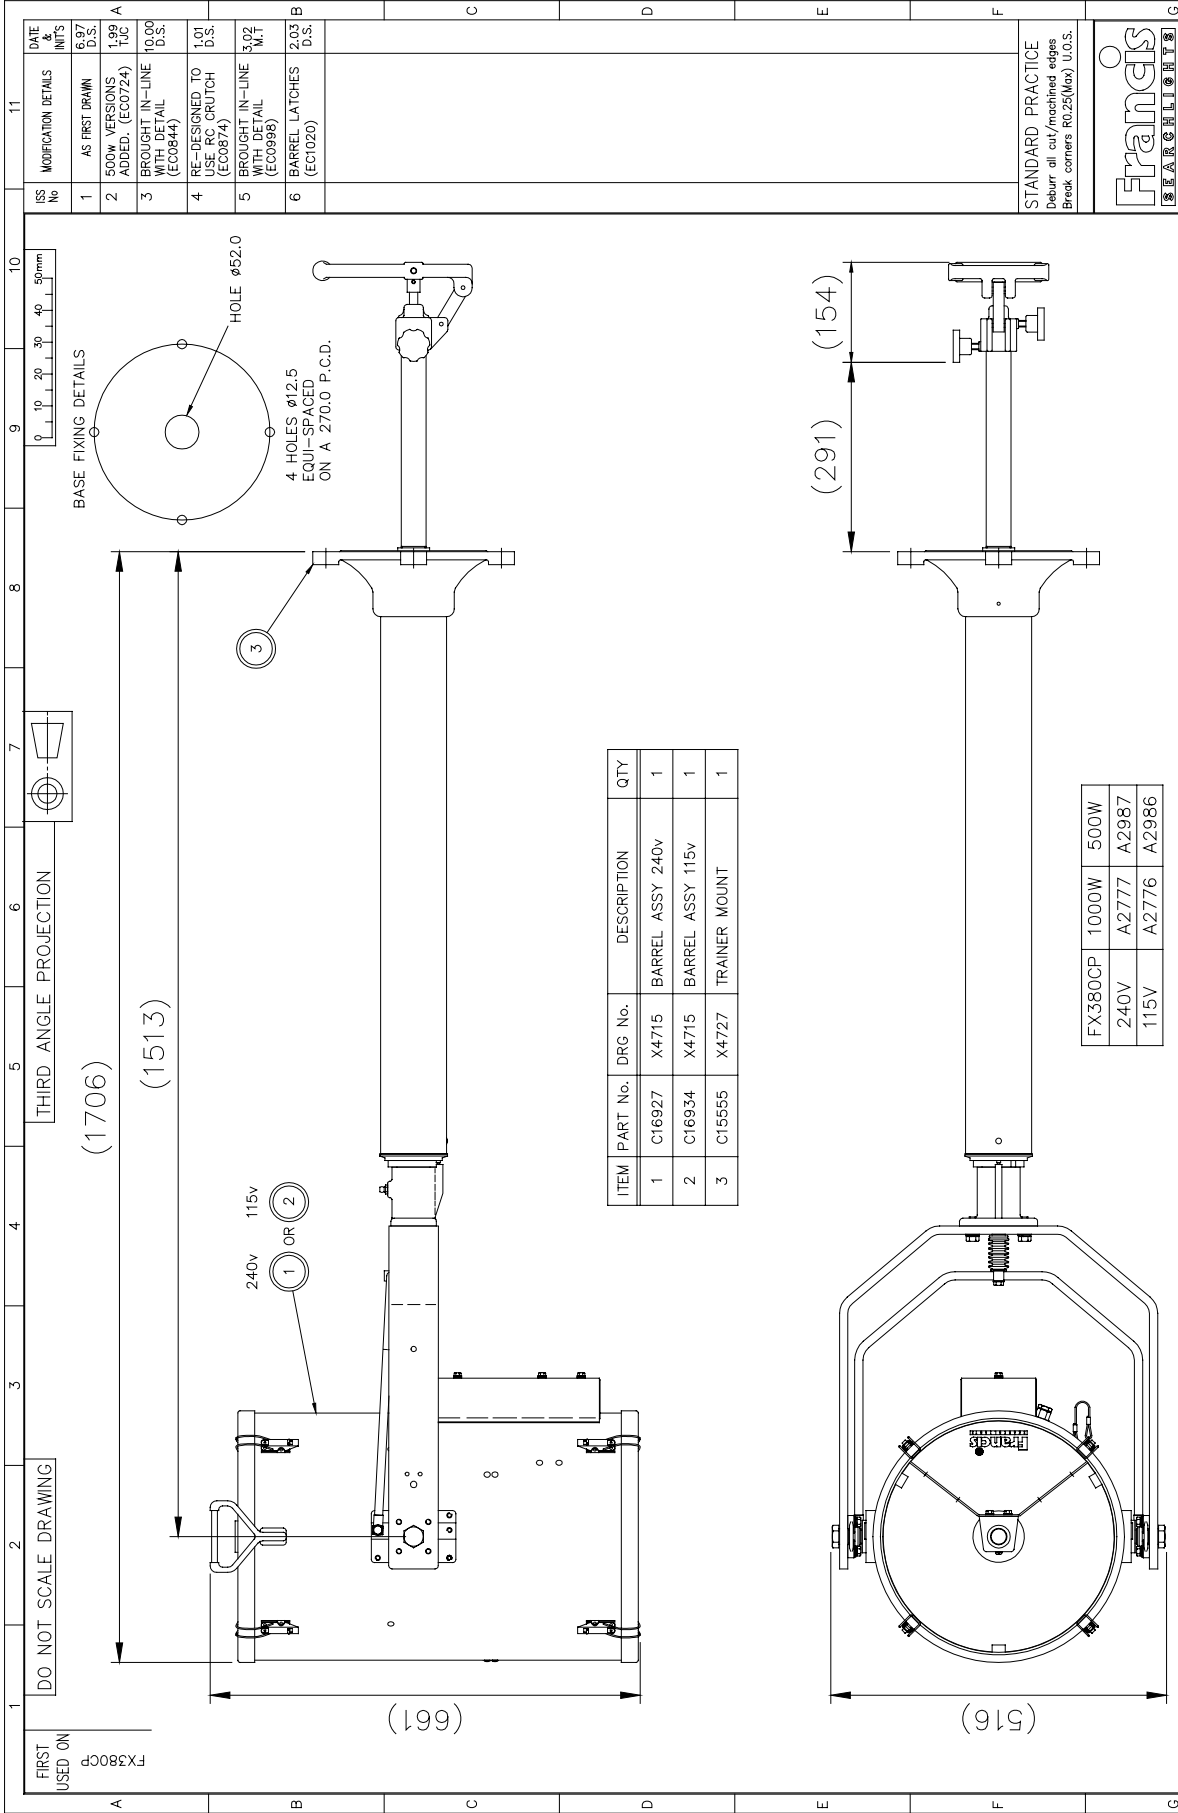

ISS No	MODIFICATION DETAILS	DATE & INIT'S
1	AS FIRST DRAWN	6.97 D.S.
2	500w VERSIONS ADDED. (EC0724)	1.99 T.J.C
3	BROUGHT IN-LINE WITH DETAIL (EC0844)	10.00 D.S.
4	RE-DESIGNED TO USE 16mm CRUTCH (EC0874)	1.01 D.S.
5	BROUGHT IN-LINE WITH DETAIL (EC0998)	3.02 M.T
6	BARREL LATCHES (EC1020)	2.03 D.S.


STANDARD PRACTICE
Debur all cut/finished edges
Break corners R0.25(Min) 0.03.



FRANCIS SEARCHLIGHTS LIMITED · UNION ROAD · BOLTON · BL2 2HJ		© 1997	A2	CONT ON SHEET
DRAWN	D.S.	DATE	6.97	TOLERANCES
CHECKED	SCALE	1:5	General: ±	Angular: ±
ALL DIMENSIONS IN MILLIMETRES		Send Castings: To ISO 8062 CT10		Die Castings: To ISO 8062 CT8
Hole centres & points: ±		FINISH		DESCRIPTION
PART No./DRG No.		FX380CP G.A.		SHT
PART No./DRG No.		X4722		1

ITEM	PART No.	DRG No.	DESCRIPTION	QTY
1	C16927	X4715	BARREL ASSY 240v	1
2	C16934	X4715	BARREL ASSY 115v	1
3	C15555	X4727	TRAINER MOUNT	1

FINISH	DESCRIPTION
FX380CP	1000W 500W
240V	A2777 A2987
115V	A2776 A2986

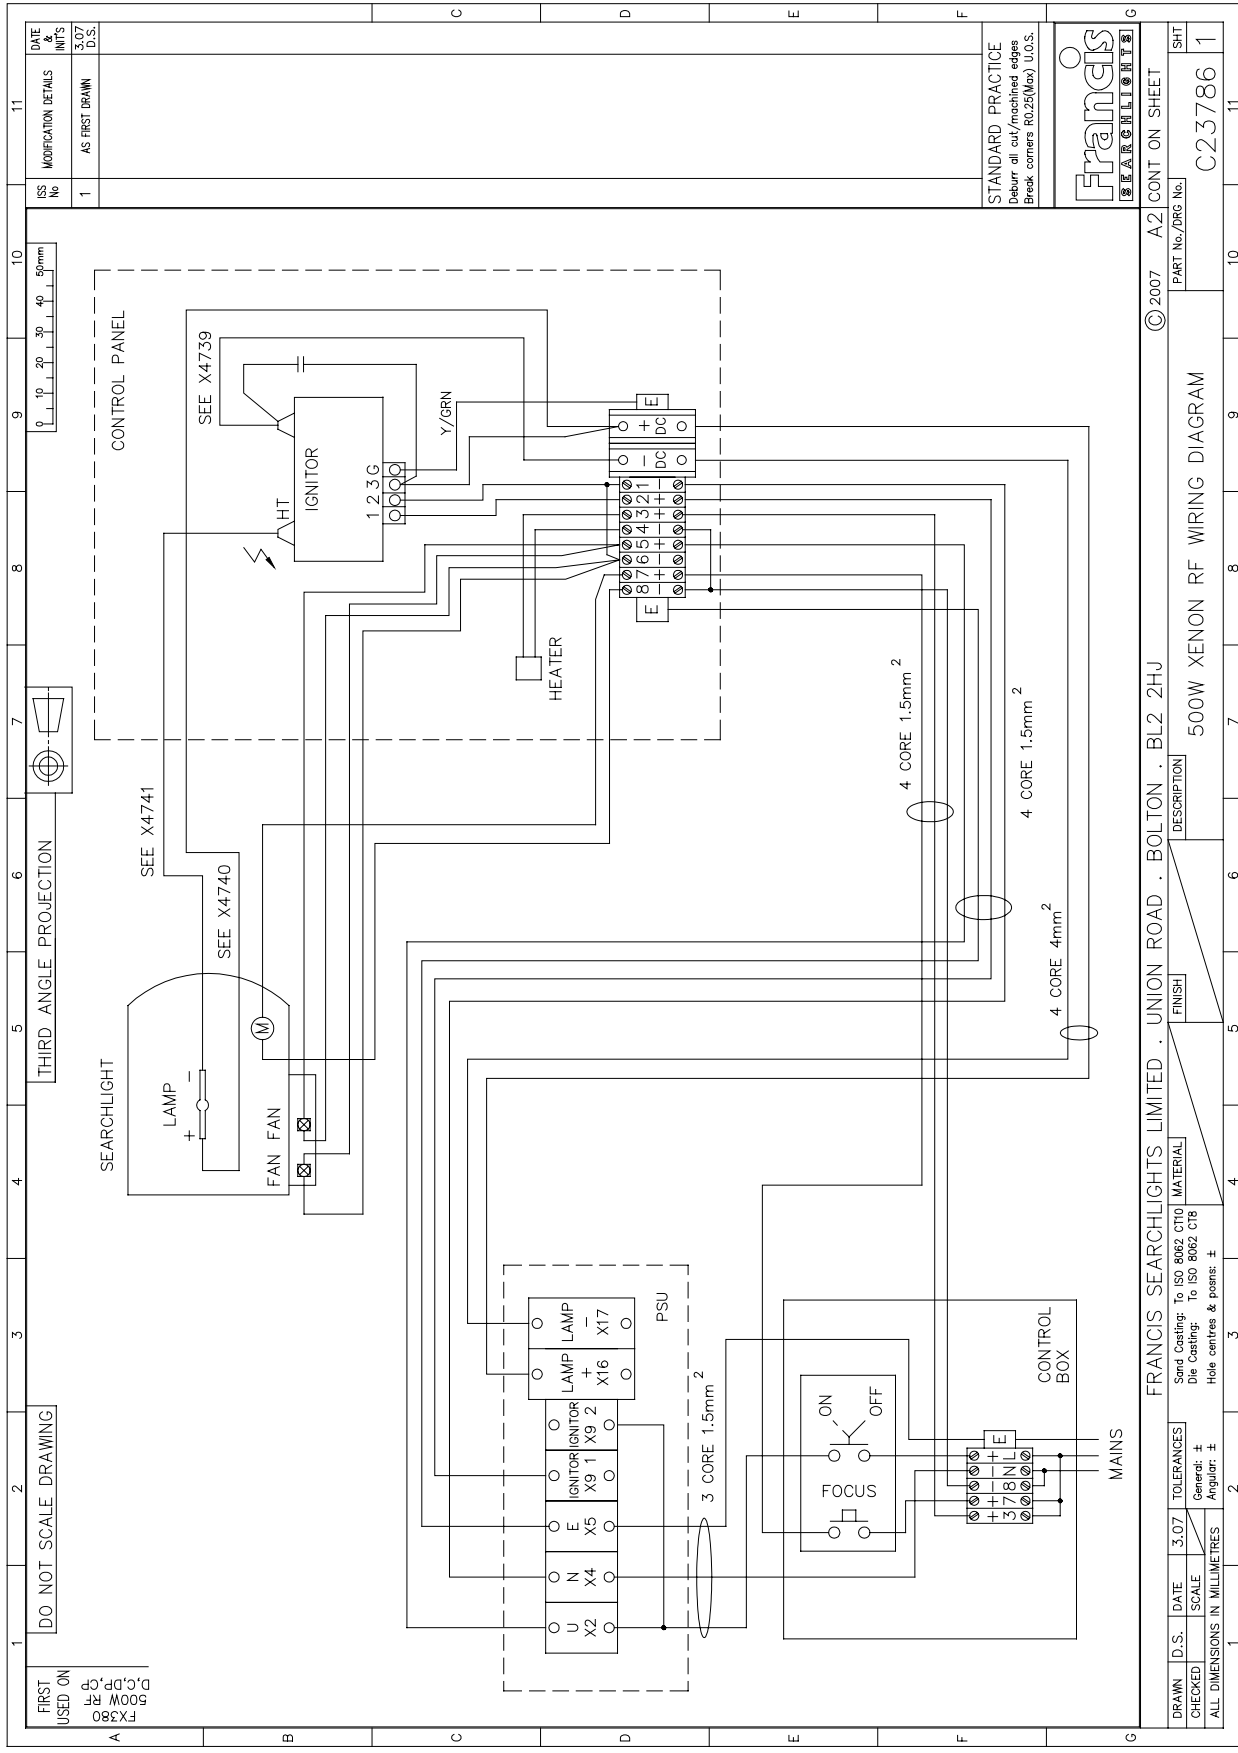

11
10
9
8
7
6
5
4
3
2
1

DO NOT SCALE DRAWING
THIRD ANGLE PROJECTION

ISS No 1
DATE 3.07
MODIFICATION DETAILS
AS FIRST DRAWN
IMTS
D.S.

FIRST USED ON
FX380
500W
P.P.
C.D.
R.F.

CONTROL PANEL

SEARCHLIGHT
LAMP
FAN FAN
SEE X4741
SEE X4740

IGNITOR
1 2 3 G
Y/GRN

HEATER
8 7 6 5 4 3 2 1 E

PSU
LAMP LAMP
IGNITOR X9 1
X16 X17

CONTROL BOX
ON OFF
FOCUS

MAINS
3 2 1 0 E
3 7 8 N L
E

4 CORE 1.5mm 2
4 CORE 1.5mm 2
4 CORE 4mm 2

STANDARD PRACTICE
Debur all cut/machined edges
Break corners R0.25(Max) U.O.S.

© 2007 A2 CONT ON SHEET
PART No./DRG No. C23786 1

FRANCIS SEARCHLIGHTS LIMITED . UNION ROAD . BOLTON . BL2 2HU

DESCRIPTION 500W XENON RF WIRING DIAGRAM

FINISH

Sand Casting: To ISO 8062 CT10
Die Casting: To ISO 8062 C18

TOLERANCES
General: ±
Angular: ±

ALL DIMENSIONS IN MILLIMETRES

FRANCIS SEARCHLIGHTS

© 2007 A2 CONT ON SHEET

PART No./DRG No. C23786 1

DESCRIPTION 500W XENON RF WIRING DIAGRAM

FINISH

Sand Casting: To ISO 8062 CT10
Die Casting: To ISO 8062 C18

TOLERANCES
General: ±
Angular: ±

ALL DIMENSIONS IN MILLIMETRES

FRANCIS SEARCHLIGHTS

© 2007 A2 CONT ON SHEET

PART No./DRG No. C23786 1

DESCRIPTION 500W XENON RF WIRING DIAGRAM

FINISH

Sand Casting: To ISO 8062 CT10
Die Casting: To ISO 8062 C18

TOLERANCES
General: ±
Angular: ±

ALL DIMENSIONS IN MILLIMETRES

FRANCIS SEARCHLIGHTS

© 2007 A2 CONT ON SHEET

PART No./DRG No. C23786 1

DESCRIPTION 500W XENON RF WIRING DIAGRAM



FINISH

Sand Casting: To ISO 8062 CT10
Die Casting: To ISO 8062 C18

TOLERANCES
General: ±
Angular: ±

ALL DIMENSIONS IN MILLIMETRES

FRANCIS SEARCHLIGHTS

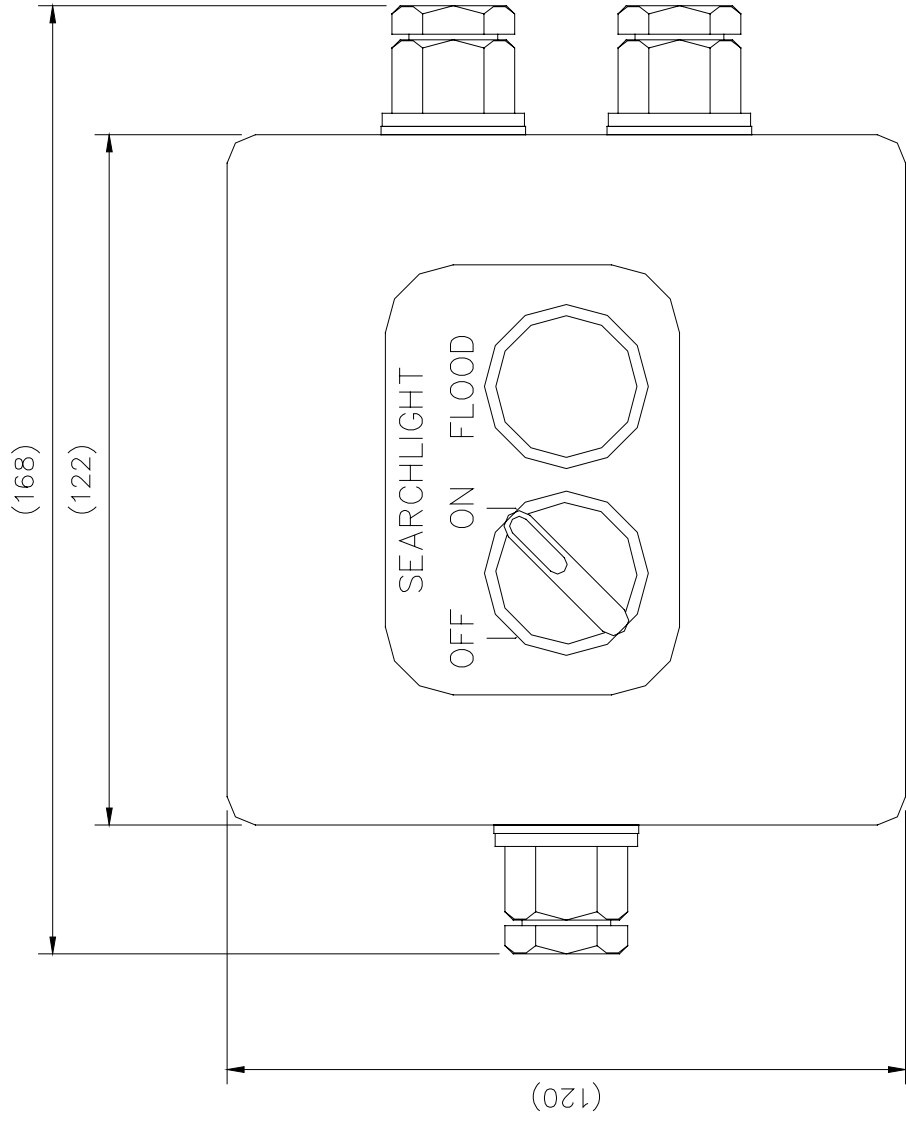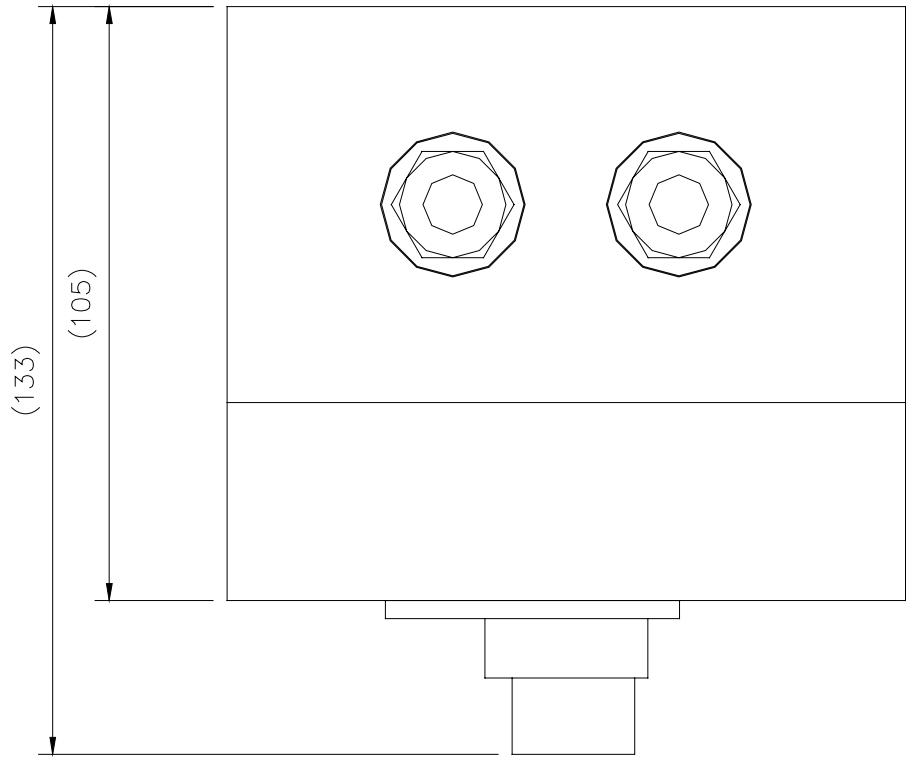

10 - Spare Parts List

The following spare parts can be ordered directly from the manufacturer:

Part Number	Description
C22605-00	Power supply unit
C06060-00	Ignitor (240v)
C09795-00	Ignitor (115v)
C16930-00	Fan (240v)
C16931-00	Fan (115v)
D20322	Lamp
C08919-00	Front glass
C08920-00	Front glass gasket
C23277-01	Heater & Fuse Assembly
C06020-00	Reflector
C11378-01	Dome seal
C21502-01	Base lockwheel assembly
C21503-01	Side lockwheel assembly
C11148-00	'O' ring seal (Deck & Cabin)
C10170-00	'O' ring seal (Deck Ped & Cabin Ped)
C20281-00	Bellows
C08926-00	Seal

Remote Focus Parts

C15458-00	Motor - Remote Focus
C14142-00	Switch – Focus
C14143-00	Switch 10A - On/Off

In order to prolong the life and performance of your product, we recommend that you only specify Francis Searchlights spare parts. This will ensure that any warranties on your equipment will not be invalidated.

When ordering spare parts please contact the Sales Department at Francis Searchlights Limited. Please quote searchlight model and serial number at all times. This will enable a fast response to your spares requirements.